

Allied Telesis



CentreCOM®

AR300 AR700 Series Router

Command Reference



AR300
AR700
AR300
AR700

CentreCOM®
**AR300/AR700
Series Router**

Command Reference

Copyright © 1997, 1999 Allied Telesis K.K.

Copyright © 1997, 1999 Allied Telesyn International Corporation

Copyright © 1992–1999 Teltron Limited

Produced by Allied Telesis K.K.

WWW for Allied Telesis K.K.: <http://www.allied-telesis.co.jp/>

Produced by Allied Telesyn International Corporation.

Information in this manual is subject to change without notice and does not represent a commitment on the part of Allied Telesis K.K. and Allied Telesyn International Corporation. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of the copyright owner.

In no event shall Allied Telesis K.K. and Allied Telesyn International Corporation be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis K.K. and/or Allied Telesyn International Corporation have been advised of, known, or should have known, the possibility of such damages.

CentreCOM is a registered trademark of Allied Telesis K.K. and Allied Telesyn International Corporation. DEC™, DECnet™, ULTRIX, VAX™, VMS™ and VT are trademarks of Digital Equipment Corporation. Apple®, LaserWriter®, Apple Talk®, Kanji Talk® and Macintosh® are registered trademarks of Apple Computer, Inc. Microsoft®, Windows®95, Windows NT® and MS-DOS® are registered trademarks of Microsoft Corporation. IBM® is a registered trademark of International Business Machines. PC9800® is a registered trademark of NEC Corporation. IPX® and Novell® are registered trademarks of Novell, Inc. EtherNet® and XNS® are registered trademarks of Xerox Corporation. UNIX® is a registered trademark of AT&T Bell Laboratories.

Contents

Contents

Preface

Purpose of this Manual	xxxvii
Intended Audience	xxxviii
Structure of this Manual	xxxix
Other Documents	xli
Supported Standards and Protocols	xli
Obtaining Copies of Internet Protocols and Standards	xliii
Background Reading	xliii
Conventions	xlv
Unsupported Features	xlvii

Chapter 1

Operation

Introduction	1-4
The Command Processor	1-4
Normal Mode and Security Mode	1-4
User Privilege Levels	1-5
Remote Security Officer	1-6
Entering Commands	1-7
Online Help	1-8
Storing and Retrieving Configuration Information	1-9
User Authentication Facility	1-10
The User Authentication Database	1-11
Asynchronous Port Security	1-15
Telneting from the Router	1-15
Counters	1-16
Semipermanent Manager Port	1-16
RADIUS	1-17
TACACS	1-18
Remote Management	1-19
Monitoring and Fault Diagnosis	1-19
Event Logging	1-19
Restarts	1-19
CPU Utilisation	1-20
Memory	1-20
Nonvolatile Storage (NVS)	1-20

FLASH Memory	1-21
Physical Characteristics	1-21
The File Subsystem	1-22
File Naming Conventions	1-22
Using Wildcards to Specify Groups of Files	1-23
Working With Files	1-23
FLASH File System	1-24
Working with FFS Files	1-24
Compaction	1-25
FFS Messages	1-25
The Built-in Text Editor	1-25
Mail Subsystem	1-26
Configuration Examples	1-27
Software Releases and Patches	1-28
Releases	1-29
Patches	1-30
Router Startup Operations	1-30
Downloading Releases and Patches into the Router	1-32
Install Information	1-33
Examples	1-34
Special Feature Licences	1-38
Command Reference	1-38
ACTIVATE FLASH COMPACTION	1-38
ADD RADIUS SERVER	1-39
ADD TACACS SERVER	1-40
ADD USER	1-41
ADD USER RSO	1-43
CLEAR FLASH TOTALLY	1-43
CREATE CONFIG	1-44
CREATE FFILE	1-45
DELETE FFILE	1-46
DELETE FILE	1-46
DELETE INSTALL	1-47
DELETE MAIL	1-48
DELETE RADIUS SERVER	1-48
DELETE TACACS SERVER	1-49
DELETE USER	1-49
DELETE USER RSO	1-50
DESTROY PATCH	1-50
DISABLE FEATURE	1-51
DISABLE MAIL DEBUG	1-51
DISABLE RELEASE	1-52
DISABLE SYSTEM SECURITY_MODE	1-52
DISABLE USER	1-53
DISABLE USER RSO	1-53
DUMP	1-54
EDIT	1-55
ENABLE FEATURE	1-57
ENABLE MAIL DEBUG	1-58
ENABLE RELEASE	1-58
ENABLE SYSTEM SECURITY_MODE	1-59
ENABLE USER	1-60
ENABLE USER RSO	1-60
HELP	1-61
LOAD	1-61
LOGIN	1-63
LOGOFF	1-64
MAIL	1-64
MODIFY	1-65

PURGE USER	1-66
RENAME	1-66
RESET LOADER	1-67
RESET USER	1-67
RESTART	1-68
SET CONFIG	1-68
SET HELP	1-69
SET INSTALL	1-70
SET LOADER	1-71
SET MAIL	1-72
SET MANAGER PORT	1-72
SET NVS CLEAR_TOTALLY	1-73
SET NVS CREATE	1-73
SET NVS DELETE	1-74
SET NVS MODIFY	1-75
SET PASSWORD	1-75
SET SYSTEM CONTACT	1-76
SET SYSTEM LOCATION	1-76
SET SYSTEM NAME	1-77
SET SYSTEM TERRITORY	1-77
SET TIME	1-78
SET USER	1-79
SHOW BUFFER	1-81
SHOW CONFIG	1-83
SHOW CPU	1-85
SHOW DEBUG	1-86
SHOW EXCEPTION	1-86
SHOW FEATURE	1-88
SHOW FFILE	1-89
SHOW FILE	1-91
SHOW FLASH	1-92
SHOW FLASH PHYSICAL	1-93
SHOW INSTALL	1-94
SHOW LOADER	1-95
SHOW MAIL	1-96
SHOW MANAGER PORT	1-97
SHOW NVS	1-97
SHOW NVS DUMP	1-99
SHOW NVS FREE	1-100
SHOW PATCH	1-100
SHOW RADIUS	1-101
SHOW RELEASE	1-102
SHOW STARTUP	1-103
SHOW SYSTEM	1-103
SHOW TACACS SERVER	1-106
SHOW TIME	1-106
SHOW USER	1-106
SHOW USER RSO	1-109
UPLOAD	1-111

Chapter 2

Interfaces

Introduction	2-3
Naming interfaces	2-3
Ethernet	2-4
Encapsulations	2-5

Configuration	2-7
Synchronous Interfaces	2-9
Encapsulations	2-9
Configuration	2-10
Asynchronous Interfaces	2-12
Encapsulations	2-12
Configuration	2-13
Autobauding	2-17
Testing Serial Data Circuits	2-17
Carrier Detect	2-18
Loop back	2-18
Data indicators	2-18
Displaying Interfaces	2-18
Interface Link Traps	2-19
Managing Interfaces with SNMP	2-19
Command Reference	2-20
CONNECT PORT	2-20
DISABLE INTERFACE LINKTRAP	2-20
DISABLE PORT	2-21
DISABLE SYN	2-22
DISABLE SYN DEBUG	2-22
ENABLE INTERFACE LINKTRAP	2-23
ENABLE PORT	2-23
ENABLE SYN	2-24
ENABLE SYN DEBUG	2-24
PURGE PORT	2-24
RESET ETH	2-25
RESET ETH COUNTERS	2-25
RESET PORT	2-26
RESET PORT COUNTERS	2-26
RESET PORT HISTORY	2-27
RESET SYN	2-28
RESET SYN COUNTERS	2-28
SET INTERFACE TRALIMIT	2-29
SET PORT	2-29
SET SYN	2-34
SHOW ETH CONFIGURATION	2-35
SHOW ETH COUNTERS	2-36
SHOW ETH MACADDRESS	2-42
SHOW ETH RECEIVE	2-42
SHOW INTERFACE	2-43
SHOW PORT	2-47
SHOW SYN	2-54
SHOW SYN COUNTERS	2-55

Chapter 3

Point-to-Point Protocol (PPP)

Introduction	3-3
The Point-to-Point Protocol	3-3
Encapsulation	3-3
Control Protocols	3-4
LCP Options	3-5
Link Quality Management	3-6
Multilink PPP	3-6
Bandwidth Allocation Protocol	3-7
Dial-On-Demand	3-8

Leased Line Backup	3-8
Bandwidth on Demand	3-9
Synchronous Dialling	3-10
PPP Callback	3-11
Magic Number	3-12
Authentication Protocols	3-12
Password Authentication Protocol (PAP)	3-13
Challenge-Handshake Authentication Protocol (CHAP)	3-13
Configuring Authentication	3-14
Debugging PPP Links	3-16
Templates	3-16
Support for PPP	3-18
Configuration Examples	3-21
Configuring a PPP link	3-21
Multilink Aggregation	3-24
Dial on Demand Links	3-26
Link Quality Monitoring	3-26
Compression and Encryption	3-27
Leased Line Backup	3-28
Bandwidth on Demand	3-29
Bandwidth on Demand with Leased Line Circuits and ISDN	3-31
Command Reference	3-33
ACTIVATE PPP	3-34
ADD PPP	3-34
CREATE PPP	3-38
CREATE PPP TEMPLATE	3-43
DELETE PPP	3-47
DESTROY PPP	3-48
DESTROY PPP TEMPLATE	3-48
DISABLE PPP	3-49
DISABLE PPP DEBUG	3-49
DISABLE PPP TEMPLATE DEBUG	3-50
ENABLE PPP	3-50
ENABLE PPP DEBUG	3-51
ENABLE PPP TEMPLATE DEBUG	3-53
PURGE PPP	3-54
RESET PPP	3-54
SET PPP	3-55
SET PPP TEMPLATE	3-61
SHOW PPP	3-65
SHOW PPP CONFIG	3-66
SHOW PPP COUNT	3-71
SHOW PPP DEBUG	3-83
SHOW PPP IDLETIMER	3-84
SHOW PPP MULTILINK	3-85
SHOW PPP NAMESERVER	3-86
SHOW PPP TEMPLATE	3-87
SHOW PPP TXSTATUS	3-90

Chapter 4

Frame Relay

Introduction	4-3
Encapsulation	4-4
Data Link Connections	4-6
The Local Management Interface (LMI)	4-8
Logical Interfaces	4-8

Disabling or Resetting a Frame Relay Interface	4-8
Disabling or Resetting a Frame Relay DLC	4-9
Slow-start Mechanism	4-10
Congestion Detection	4-11
Detection using CLLM messages	4-11
Detection using BECN bits	4-11
Congestion Control Scheme	4-12
Support for Frame Relay	4-13
Encryption and Compression over Frame Relay	4-14
Troubleshooting Frame Relay Networks	4-15
Configuring Frame Relay	4-15
Configuration Examples	4-18
Frame Relay without an LMI	4-18
Frame Relay with an LMI	4-21
Using Frame Relay Logical Interfaces	4-23
Command Reference	4-24
ADD FRAMERELAY DLC	4-24
ADD FRAMERELAY LI	4-25
CREATE FRAMERELAY	4-26
DELETE FRAMERELAY DLC	4-29
DELETE FRAMERELAY LI	4-29
DESTROY FRAMERELAY	4-30
DISABLE FRAMERELAY	4-30
DISABLE FRAMERELAY CONGESTIONCONTROL	4-31
DISABLE FRAMERELAY DEBUG	4-31
DISABLE FRAMERELAY DLC	4-32
DISABLE FRAMERELAY DLC DEBUG	4-32
DISABLE FRAMERELAY LI DEBUG	4-33
DISABLE FRAMERELAY SLOWSTART	4-34
ENABLE FRAMERELAY	4-34
ENABLE FRAMERELAY CONGESTIONCONTROL	4-35
ENABLE FRAMERELAY DEBUG	4-35
ENABLE FRAMERELAY DLC	4-36
ENABLE FRAMERELAY DLC DEBUG	4-37
ENABLE FRAMERELAY LI DEBUG	4-38
ENABLE FRAMERELAY SLOWSTART	4-39
RESET FRAMERELAY	4-39
RESET FRAMERELAY DLC	4-40
SET FRAMERELAY	4-40
SET FRAMERELAY DLC	4-43
SHOW FRAMERELAY	4-44
SHOW FRAMERELAY DLC	4-54
SHOW FRAMERELAY LI	4-60

Chapter 5

Integrated Services Digital Network (ISDN)

Introduction	5-4
Basic Rate Access	5-4
Primary Rate Access	5-7
Support for ISDN	5-13
BRI Physical Layer	5-14
Configuring and Controlling the Basic Rate Interface	5-15
Examining the Status of the Basic Rate Interface	5-17
Monitoring Operation of the Basic Rate Interface	5-18
PRI Physical Layer	5-19
Configuring and Controlling the Primary Rate Interface	5-19

Examining the Status of the Primary Rate Interface	5-22
Monitoring Operation of the Primary Rate Interface	5-23
LAPD	5-25
BRI Versus PRI	5-25
Operation	5-25
Packet mode support	5-25
Fault Finding	5-26
Default Setup	5-26
Addressing	5-27
Frame Control Fields	5-28
Q.931	5-28
Service Profile Identifiers (SPIDs)	5-30
Profiles Which Require SPIDs	5-30
Definition of SPIDs	5-30
SPID Initialisation	5-31
SPID Debugging	5-31
Automatic Switch Detection	5-34
Call Control	5-35
Call Logging	5-38
Using a Domain Name Server	5-39
Slotted Interface Numbering	5-40
Always On/Dynamic ISDN (AODI)	5-40
Components of AODI	5-40
Configuring AODI	5-41
Configuration Examples	5-44
A Basic ISDN Setup	5-44
Refining the ISDN Setup	5-53
Command Reference	5-54
ACTIVATE ISDN CALL	5-54
ACTIVATE Q931 ASPID	5-55
ACTIVATE Q931 MESSAGE	5-55
ADD ISDN CALL	5-56
ADD ISDN CLILIST	5-62
ADD ISDN DOMAINNAME	5-62
ADD LAPD TEI	5-63
ADD LAPD XSPID	5-63
ADD LAPD XTEI	5-64
DEACTIVATE ISDN CALL	5-64
DELETE ISDN CALL	5-65
DELETE ISDN CLILIST	5-65
DELETE ISDN DOMAINNAME	5-66
DELETE LAPD TEI	5-66
DELETE LAPD XSPID	5-67
DELETE LAPD XTEI	5-67
DISABLE BRI CTEST	5-68
DISABLE BRI DEBUG	5-68
DISABLE BRI TEST	5-69
DISABLE ISDN CALL	5-69
DISABLE ISDN LOG	5-70
DISABLE PRI CTEST	5-70
DISABLE PRI DEBUG	5-71
DISABLE PRI TEST	5-71
DISABLE Q931 DEBUG	5-72
ENABLE BRI CTEST	5-73
ENABLE BRI DEBUG	5-74
ENABLE BRI TEST	5-75
ENABLE ISDN CALL	5-78
ENABLE ISDN LOG	5-78
ENABLE PRI CTEST	5-79

ENABLE PRI DEBUG	5-79
ENABLE PRI TEST	5-80
ENABLE Q931 ASPID	5-82
ENABLE Q931 DEBUG	5-83
RESET BRI	5-88
RESET BRI COUNTERS	5-88
RESET PRI	5-89
RESET PRI COUNTERS	5-89
RESET Q931	5-90
SET BRI	5-90
SET ISDN CALL	5-92
SET ISDN DOMAINNAME	5-97
SET ISDN LOG	5-98
SET LAPD	5-98
SET PRI	5-100
SET Q931	5-103
SHOW BRI CONFIGURATION	5-105
SHOW BRI COUNTERS	5-107
SHOW BRI CTEST	5-112
SHOW BRI DEBUG	5-113
SHOW BRI STATE	5-114
SHOW BRI TEST	5-118
SHOW ISDN CALL	5-121
SHOW ISDN CLILIST	5-125
SHOW ISDN DOMAINNAME	5-126
SHOW ISDN LOG	5-126
SHOW LAPD	5-128
SHOW LAPD COUNT	5-130
SHOW LAPD STATE	5-132
SHOW PRI CONFIGURATION	5-133
SHOW PRI COUNTERS	5-134
SHOW PRI CTEST	5-143
SHOW PRI DEBUG	5-145
SHOW PRI STATE	5-145
SHOW PRI TEST	5-151
SHOW Q931	5-154
SHOW Q931 SPID	5-157

Chapter 6

X.25

Introduction	6-3
LAPB	6-4
DCE Mode	6-4
DTE Mode	6-5
DTE Addresses	6-6
X.25 DCE Route Mapping	6-7
Encapsulations	6-7
Configuring LAPB	6-9
Configuring an Interface for LAPB	6-9
Configuring LAPB Interface Parameters	6-9
Configuring X.25 DCE	6-10
Configure the LAPB Interface	6-10
Configure the X.25 DCE Interface	6-10
Configuring DTE Addresses	6-11
Configuring X.25 Route Mapping	6-11
Configuring X.25 DTE	6-12

Configure the LAPB Interface	6-12
Configure the X.25 DTE Interface	6-12
Configuring Call Parameter Entries	6-13
Configuring Permanent Virtual Circuits	6-13
Configuration Examples	6-14
A Basic X.25 Setup	6-14
An Extended X.25 Setup	6-19
X.25 over ISDN D Channel	6-25
Command Reference	6-26
ACTIVATE MIOX CIRCUIT	6-26
ADD MIOX CIRCUIT	6-27
ADD X25C DTEADDRESS	6-29
ADD X25C ROUTE	6-29
ADD X25T CPAR	6-30
CREATE LAPB	6-31
CREATE X25C	6-32
CREATE X25T	6-33
DEACTIVATE MIOX CIRCUIT	6-35
DELETE MIOX CIRCUIT	6-35
DELETE X25C DTEADDRESS	6-36
DELETE X25C ROUTE	6-37
DELETE X25T CPAR	6-37
DESTROY LAPB	6-38
DESTROY X25C	6-38
DESTROY X25T	6-39
DISABLE MIOX CIRCUIT	6-39
ENABLE MIOX CIRCUIT	6-40
RESET LAPB	6-40
RESET X25T	6-41
SET LAPB	6-41
SET MIOX	6-42
SET MIOX CIRCUIT	6-43
SET X25C	6-45
SET X25T	6-46
SET X25T CPAR	6-47
SHOW LAPB	6-48
SHOW MIOX	6-52
SHOW MIOX COUNT	6-53
SHOW MIOX CIRCUIT	6-55
SHOW X25C	6-59
SHOW X25C DTEADDRESS	6-60
SHOW X25C ROUTE	6-61
SHOW X25T	6-62
SHOW X25T CPAR	6-66

Chapter 7

Synchronous Tunnelling

Introduction	7-2
Support for Synchronous Tunnelling	7-2
Configuration Example	7-3
Command Reference	7-4
ADD STT	7-4
DELETE STT	7-5
RESET STT	7-5
SET STT	7-6
SHOW STT	7-7

Chapter 8

Internet Protocol (IP)

Introduction	8-4
The Internet	8-4
Addressing	8-6
Subnets	8-8
Multihoming	8-9
Address Resolution	8-9
ICMP	8-10
Routing	8-11
Routing Information Filters	8-13
RIP	8-14
EGP	8-15
OSPF	8-15
Metrics	8-16
Policy-Based Routing	8-16
Priority-Based Routing	8-18
Named Hosts	8-19
Traffic Filters	8-20
SNMP	8-23
Control and Debug Commands	8-23
Ping and Trace Route	8-24
Security Options	8-25
Security Associations	8-26
Broadcast Forwarding	8-27
Examples	8-28
BOOTP Relay Agent	8-30
IP Multicasting	8-32
Network Address Translation	8-33
Remote Address Assignment	8-35
Configuration Examples	8-36
A Basic TCP/IP Setup	8-36
Troubleshooting	8-39
Configuring IP Filters	8-41
Command Reference	8-45
ADD BOOTP RELAY	8-45
ADD IP ARP	8-46
ADD IP EGP	8-46
ADD IP FILTER	8-47
ADD IP HELPER	8-53
ADD IP HOST	8-54
ADD IP INTERFACE	8-55
ADD IP NAT	8-57
ADD IP RIP	8-60
ADD IP ROUTE	8-62
ADD IP ROUTE FILTER	8-64
ADD IP SA	8-65
ADD IP TRUSTED	8-65
DELETE BOOTP RELAY	8-66
DELETE IP ARP	8-67
DELETE IP EGP	8-67
DELETE IP FILTER	8-68
DELETE IP HELPER	8-68
DELETE IP HOST	8-69
DELETE IP INTERFACE	8-70
DELETE IP NAT	8-71
DELETE IP RIP	8-72
DELETE IP ROUTE	8-73
DELETE IP ROUTE FILTER	8-74

DELETE IP SA	8-74
DELETE IP TRUSTED	8-75
DELETE TCP	8-75
DISABLE BOOTP RELAY	8-76
DISABLE IP	8-76
DISABLE IP DEBUG	8-77
DISABLE IP ECHOREPLY	8-77
DISABLE IP EGP	8-77
DISABLE IP EXPORTTRIP	8-78
DISABLE IP FOFILTER	8-78
DISABLE IP FORWARDING	8-79
DISABLE IP HELPER	8-80
DISABLE IP INTERFACE	8-80
DISABLE IP NAT	8-81
DISABLE IP REMOTEASSIGN	8-81
DISABLE IP ROUTE	8-82
DISABLE IP SRCROUTE	8-82
ENABLE BOOTP RELAY	8-83
ENABLE IP	8-83
ENABLE IP DEBUG	8-84
ENABLE IP ECHOREPLY	8-84
ENABLE IP EGP	8-84
ENABLE IP EXPORTTRIP	8-85
ENABLE IP FOFILTER	8-85
ENABLE IP FORWARDING	8-86
ENABLE IP HELPER	8-86
ENABLE IP INTERFACE	8-87
ENABLE IP NAT	8-87
ENABLE IP REMOTEASSIGN	8-88
ENABLE IP ROUTE	8-89
ENABLE IP SRCROUTE	8-89
PING	8-90
PURGE BOOTP RELAY	8-92
PURGE IP	8-92
RESET IP	8-92
RESET IP COUNTER	8-93
RESET IP INTERFACE	8-93
SET BOOTP MAXHOPS	8-94
SET IP ARP	8-94
SET IP AUTONOMOUS	8-95
SET IP FILTER	8-96
SET IP HOST	8-99
SET IP INTERFACE	8-100
SET IP LOCAL	8-102
SET IP NAMESERVER	8-104
SET IP RIP	8-104
SET IP ROUTE	8-106
SET IP ROUTE FILTER	8-107
SET PING	8-109
SET TRACE	8-110
SHOW BOOTP RELAY	8-112
SHOW IP	8-113
SHOW IP ARP	8-115
SHOW IP COUNTER	8-116
SHOW IP DEBUG	8-123
SHOW IP EGP	8-123
SHOW IP FILTER	8-124
SHOW IP HELPER	8-126
SHOW IP HOST	8-128

SHOW IP INTERFACE	8-129
SHOW IP NAT	8-132
SHOW IP RIP	8-136
SHOW IP RIP COUNTER	8-138
SHOW IP ROUTE	8-139
SHOW IP ROUTE FILTER	8-143
SHOW IP SA	8-144
SHOW IP TRUSTED	8-145
SHOW IP UDP	8-145
SHOW PING	8-146
SHOW TCP	8-148
SHOW TRACE	8-152
STOP PING	8-153
STOP TRACE	8-154
TRACE	8-154

Chapter 9

Novell IPX

Introduction	9-3
The IPX Protocol	9-3
Addressing in a Novell Network	9-3
Interfaces and Circuits	9-4
Routing	9-5
Service Advertisement	9-6
Traffic Filters	9-7
RIP and SAP Filters	9-8
Wildcard Expressions	9-8
RIP Filters	9-9
SAP Filters	9-10
Global Versus Circuit-Specific Filters	9-10
Dial-on-Demand IPX	9-11
SPX Spoofing with Dial-on-Demand IPX	9-12
Troubleshooting SPX Spoofing	9-13
Extended PING for IPX	9-14
Counters and the MIB	9-15
Configuration Examples	9-15
A Basic IPX Setup	9-15
IPX Dial-On-Demand	9-20
Command Reference	9-28
ADD IPX CIRCUIT	9-28
ADD IPX EXCLUSION	9-32
ADD IPX INCLUSION	9-33
ADD IPX RIP	9-34
ADD IPX ROUTE	9-35
ADD IPX SAP	9-35
ADD IPX SERVICE	9-36
DELETE IPX CIRCUIT	9-38
DELETE IPX EXCLUSION	9-39
DELETE IPX INCLUSION	9-40
DELETE IPX RIP	9-41
DELETE IPX ROUTE	9-41
DELETE IPX SAP	9-42
DELETE IPX SERVICE	9-42
DISABLE IPX	9-43
DISABLE IPX CIRCUIT	9-43
ENABLE IPX	9-43

ENABLE IPX CIRCUIT	9-44
PURGE IPX	9-44
RESET IPX	9-45
SET IPX CIRCUIT	9-45
SET IPX GRIP GSAP	9-48
SET IPX RIP	9-49
SET IPX SAP	9-50
SHOW IPX	9-51
SHOW IPX CACHE	9-53
SHOW IPX CALLLOG	9-53
SHOW IPX CIRCUIT	9-56
SHOW IPX COUNTER	9-57
SHOW IPX EXCLUSION	9-60
SHOW IPX INCLUSION	9-61
SHOW IPX RIP	9-62
SHOW IPX ROUTE	9-63
SHOW IPX SAP	9-63
SHOW IPX SERVICE	9-65
SHOW IPX SPXSPOOF	9-66

Chapter 10

DECnet

Introduction	10-2
Overview of a DECnet Network	10-2
DECnet Addresses	10-3
Routing and the Default Router	10-3
Routes and Routing Tables	10-4
Filters	10-5
Managing the Router	10-5
Counters	10-5
Timers	10-6
Costs	10-6
Configuration Examples	10-8
A Basic DECnet Setup	10-8
Troubleshooting	10-10
Refining the DECnet Setup	10-11
Command Reference	10-12
ADD DECNET EXCLUSION	10-12
ADD DECNET INCLUSION	10-13
ADD DECNET INTERFACE	10-14
ADD DECNET LPN	10-15
DELETE DECNET EXCLUSION	10-16
DELETE DECNET INCLUSION	10-16
DELETE DECNET INTERFACE	10-17
DELETE DECNET LPN	10-18
DISABLE DECNET	10-18
ENABLE DECNET	10-19
PURGE DECNET	10-19
RESET DECNET	10-20
SET DECNET	10-20
SET DECNET INTERFACE	10-23
SHOW DECNET	10-24
SHOW DECNET COUNTER	10-25
SHOW DECNET EXCLUSION	10-28
SHOW DECNET INCLUSION	10-28
SHOW DECNET INTERFACE	10-29

SHOW DECNET LPN	10-30
SHOW DECNET ROUTE	10-30

Chapter 11

Terminal Server

Introduction	11-2
TTY Devices	11-2
Command Line Editing and Recall	11-4
Multiple Sessions	11-5
Accessing Telnet Hosts and Other Services	11-6
Telnet	11-6
Services	11-7
Configuration Examples	11-8
Telnet Service	11-8
Locally Defined Service	11-9
Permanent Assignment	11-10
Remote Use of Asynchronous Services	11-10
Troubleshooting	11-12
Command Reference	11-13
CONNECT	11-13
CREATE SERVICE	11-14
DESTROY SERVICE	11-15
DISCONNECT	11-16
RECONNECT	11-16
SET SERVICE	11-17
SET TELNET	11-18
SET TTY	11-18
SHOW SERVICE	11-19
SHOW SESSIONS	11-21
SHOW TTY	11-21
TELNET	11-24

Chapter 12

Printer Server

Introduction	12-2
Line Printer Daemon (LPD)	12-2
Support for LPD	12-2
Configuring LPD	12-3
Printer Operation	12-6
Troubleshooting	12-7
Stream Printing	12-8
Support for Stream Printing	12-9
Configuring Stream Printing	12-9
Permanent Assignments	12-11
Setting up a Permanent Assignment	12-11
Command Reference	12-13
ADD PERM	12-13
ADD STREAM	12-14
CREATE LPD	12-14
DELETE PERM	12-15
DELETE STREAM	12-15
DESTROY LPD	12-16
DISABLE LPD	12-16

ENABLE LPD	12-17
RESET LPD	12-17
RESET PERM	12-18
RESET STREAM	12-18
SET LPD	12-19
SET PERM	12-20
SHOW LPD	12-20
SHOW PERM	12-21
SHOW STREAM	12-22

Chapter 13

Open Shortest Path First (OSPF)

Introduction	13-3
OSPF Features	13-3
Adjacency and Designated Routers	13-5
Link State Advertisements	13-5
OSPF Packet Types	13-6
OSPF States	13-7
OSPF Metrics	13-8
Routing with OSPF	13-8
Addressless Interfaces	13-8
Using OSPF and RIP	13-9
Configuration Examples	13-9
A Basic OSPF Network	13-9
An OSPF Network with Addressless PPP Links	13-11
An OSPF Network with Virtual Links	13-12
Command Reference	13-14
ADD OSPF AREA	13-14
ADD OSPF HOST	13-16
ADD OSPF INTERFACE	13-16
ADD OSPF NEIGHBOUR	13-20
ADD OSPF RANGE	13-21
ADD OSPF STUB	13-22
DELETE OSPF AREA	13-22
DELETE OSPF HOST	13-23
DELETE OSPF INTERFACE	13-23
DELETE OSPF NEIGHBOUR	13-24
DELETE OSPF RANGE	13-25
DELETE OSPF STUB	13-25
DISABLE OSPF	13-26
DISABLE OSPF DEBUG	13-26
DISABLE OSPF INTERFACE	13-26
DISABLE OSPF LOG	13-27
ENABLE OSPF	13-28
ENABLE OSPF DEBUG	13-28
ENABLE OSPF INTERFACE	13-28
ENABLE OSPF LOG	13-29
PURGE OSPF	13-29
RESET OSPF	13-30
RESET OSPF COUNTER	13-30
RESET OSPF INTERFACE	13-31
SET OSPF	13-31
SET OSPF AREA	13-33
SET OSPF HOST	13-34
SET OSPF INTERFACE	13-34
SET OSPF NEIGHBOUR	13-36

SET OSPF RANGE	13-37
SET OSPF STUB	13-38
SHOW OSPF	13-39
SHOW OSPF AREA	13-40
SHOW OSPF DEBUG	13-43
SHOW OSPF HOST	13-43
SHOW OSPF INTERFACE	13-44
SHOW OSPF LSA	13-48
SHOW OSPF NEIGHBOUR	13-52
SHOW OSPF RANGE	13-53
SHOW OSPF ROUTE	13-54
SHOW OSPF STUB	13-56

Chapter 14

Bridging

Introduction	14-3
The Bridging Process	14-4
The Learning Process	14-4
The Forwarding Process	14-5
Ports	14-5
Filtering	14-7
Telnet to a Router Bridging IP	14-8
Spanning Tree Protocol	14-8
Electing the Root Bridge and Designated Bridge	14-9
Support for Bridging	14-10
Configuring the Router as a Bridge	14-10
A Basic LAN Bridge Setup	14-10
Bridging in a Meshed Network with Spanning Tree	14-13
A Bridge Setup Using Filters	14-14
Command Reference	14-16
ADD BRIDGE FILTER	14-16
ADD BRIDGE GROUP	14-18
ADD BRIDGE PORT	14-19
ADD BRIDGE PROTOCOL	14-20
ADD BRIDGE STATION	14-22
DELETE BRIDGE FILTER	14-22
DELETE BRIDGE GROUP	14-23
DELETE BRIDGE PORT	14-23
DELETE BRIDGE PROTOCOL	14-24
DELETE BRIDGE STATION	14-24
DISABLE BRIDGE	14-25
DISABLE BRIDGE LEARNING	14-25
DISABLE BRIDGE SPANNING	14-25
ENABLE BRIDGE	14-26
ENABLE BRIDGE LEARNING	14-26
ENABLE BRIDGE SPANNING	14-26
PURGE BRIDGE	14-27
RESET BRIDGE	14-27
SET BRIDGE AGEINGTIMER	14-27
SET BRIDGE FILTER	14-28
SET BRIDGE GROUP	14-30
SET BRIDGE PORT	14-30
SET BRIDGE PROTOCOL	14-31
SET BRIDGE SPANNING	14-32
SHOW BRIDGE	14-33
SHOW BRIDGE COUNTERS	14-34

SHOW BRIDGE FILTER	14-37
SHOW BRIDGE GROUP	14-39
SHOW BRIDGE PORT	14-41
SHOW BRIDGE PROTOCOL	14-43
SHOW BRIDGE SPANNING	14-44
SHOW BRIDGE STATION	14-46

Chapter 15

Compression and Encryption

Introduction	15-3
Overview of Compression	15-3
Overview of Encryption	15-5
Encryption Algorithms	15-5
Network Encryption	15-7
The Compression and Encryption Facility	15-8
Overview	15-8
Hardware	15-9
The ENCO Module	15-10
Access Control	15-11
STAR Key Management	15-14
Security Associations	15-19
Compression	15-20
Dual Mode Compression and Encryption	15-21
User Modules	15-22
PPP Link Compression	15-22
PPP Link Encryption	15-22
Frame Relay Link Compression	15-23
Frame Relay Link Encryption	15-23
IP Payload Encryption	15-23
X.25	15-24
Secure Shell	15-24
Command Reference	15-24
ADD SA MEMBER	15-25
CLEAR ENGINE KEYS	15-25
CREATE ENCO KEY	15-26
CREATE SA	15-27
CREATE STAR	15-28
DELETE SA MEMBER	15-29
DESTROY ENCO KEY	15-30
DESTROY SA	15-30
DESTROY STAR	15-31
DISABLE ENCO COMPSTATISTICS	15-32
DISABLE ENCO DEBUGGING	15-32
DISABLE SA DEBUGGING	15-33
DISABLE STAR DEBUGGING	15-33
ENABLE ENCO COMPSTATISTICS	15-34
ENABLE ENCO DEBUGGING	15-34
ENABLE SA DEBUGGING	15-34
ENABLE STAR DEBUGGING	15-35
ENABLE STAR MKTTRANSFER	15-35
SET ENCO KEY	15-36
SET ENCO SW	15-37
SET ENGINE MEM	15-38
SET SA	15-38
SET STAR	15-40
SHOW ENCO	15-41

SHOW ENCO CHANNEL	15-43
SHOW ENCO COUNTERS	15-50
SHOW ENCO INTERFACE	15-62
SHOW ENCO KEY	15-64
SHOW ENGINE CHANNEL	15-66
SHOW ENGINE COUNTERS	15-71
SHOW ENGINE LOG	15-86
SHOW ENGINE MEM	15-87
SHOW ENGINE STACKDUMP	15-88
SHOW ENGINE STATUS	15-89
SHOW SA	15-96
SHOW SA COUNTER	15-98
SHOW SA USER	15-104
SHOW STAR	15-106

Chapter 16

Test Facility

Introduction	16-2
Ethernet Port Tests	16-4
Asynchronous Port Tests	16-5
Synchronous Port Tests	16-6
Basic Rate ISDN Port Tests	16-7
Primary Rate ISDN Port Tests	16-8
Coprocessor Engine Tests	16-9
MAC Card Tests	16-10
Command Reference	16-10
DISABLE TEST INTERFACE	16-11
ENABLE TEST INTERFACE	16-11
RESET TEST INTERFACE	16-13
SHOW TEST	16-13

Chapter 17

Network Time Protocol (NTP)

Introduction	17-2
Overview of the Network Time Protocol	17-2
Support for NTP	17-4
Configuration Example	17-4
Command Reference	17-6
ADD NTP PEER	17-7
DELETE NTP PEER	17-7
DISABLE NTP	17-7
ENABLE NTP	17-8
PURGE NTP	17-8
RESET NTP	17-8
SET NTP UTCOFFSET	17-9
SHOW NTP	17-9

Chapter 18

Asynchronous Call Control

Introduction	18-2
--------------------	------

Call Definitions	18-2
Authenticating Incoming Calls	18-5
RADIUS Authentication	18-5
RADIUS Accounting	18-6
Using Modem Scripts	18-7
Bidirectional Calls	18-9
Interface with Higher Layers	18-9
Using a Domain Name Server	18-10
Configuration Examples	18-10
Defining an ACC Call	18-11
Assigning IP Addresses	18-12
Dial-in IPX	18-13
Router-to-Router PPP	18-13
Command Reference	18-15
ACTIVATE ACC CALL	18-15
ADD ACC CALL	18-16
ADD ACC DOMAINNAME	18-19
ADD ACC SCRIPT	18-19
DEACTIVATE ACC CALL	18-21
DELETE ACC CALL	18-21
DELETE ACC DOMAINNAME	18-22
DELETE ACC SCRIPT	18-22
DISABLE ACC CALL	18-23
DISABLE ACC CALL DEBUG	18-23
ENABLE ACC CALL	18-24
ENABLE ACC CALL DEBUG	18-24
PURGE ACC	18-25
PURGE ACC SCRIPT	18-25
SET ACC CALL	18-25
SET ACC CALL PORT	18-28
SET ACC SCRIPT	18-29
SHOW ACC	18-30
SHOW ACC CALL	18-31
SHOW ACC DOMAINNAME	18-33
SHOW ACC SCRIPT	18-33

Chapter 19

Generic Routing Encapsulation (GRE)

Introduction	19-2
Support for GRE	19-3
Configuration Examples	19-4
A Basic GRE Configuration	19-4
A Multi-point GRE Configuration	19-6
Command Reference	19-9
ADD GRE	19-9
DELETE GRE	19-10
DISABLE GRE	19-11
ENABLE GRE	19-11
PURGE GRE	19-12
RESET GRE	19-12
SET GRE	19-12
SHOW GRE	19-14

Chapter 20

Trigger Facility

Introduction	20-2
Defining Triggers	20-3
Examples	20-3
Initiating ISDN Calls During Off-Peak Periods	20-3
Retrieving System Snapshots After a Reboot	20-5
Command Reference	20-5
ACTIVATE TRIGGER	20-5
ADD TRIGGER	20-6
CREATE TRIGGER	20-7
DELETE TRIGGER	20-11
DESTROY TRIGGER	20-12
DISABLE TRIGGER	20-12
ENABLE TRIGGER	20-13
PURGE TRIGGER	20-13
SET TRIGGER	20-14
SHOW TRIGGER	20-17

Chapter 21

AppleTalk

Introduction	21-2
AppleTalk Protocol Architecture	21-2
AppleTalk Nodes and Networks	21-2
LocalTalk	21-2
EtherTalk and TokenTalk	21-4
AppleTalk Address Resolution Protocol (AARP)	21-4
Address Translation	21-5
Dynamic Assignment of Protocol Addresses	21-5
Datagram Delivery Protocol	21-5
Routing Table Maintenance Protocol (RTMP)	21-6
Name Binding Protocol (NBP)	21-8
Zone Information Protocol (ZIP)	21-9
Support for AppleTalk	21-9
AppleTalk Dial-On-Demand	21-10
Extended Ping for AppleTalk	21-11
Configuration Example	21-12
Command Reference	21-15
ADD APPLE CIRCUIT	21-15
ADD APPLE DLCI	21-16
ADD APPLE PORT	21-16
ADD APPLE ROUTE	21-18
ADD APPLE ZONE	21-19
DELETE APPLE CIRCUIT	21-19
DELETE APPLE DLCI	21-20
DELETE APPLE PORT	21-20
DELETE APPLE ROUTE	21-21
DELETE APPLE ZONE	21-21
DISABLE APPLE	21-22
DISABLE APPLE DEBUG	21-22
ENABLE APPLE	21-22
ENABLE APPLE DEBUG	21-23
PURGE APPLE	21-23
RESET APPLE	21-23
SET APPLE PORT	21-24
SET APPLE ROUTECONVERT	21-25

SET APPLE ZONE	21-25
SHOW APPLE	21-26
SHOW APPLE AARP	21-27
SHOW APPLE CIRCUIT	21-27
SHOW APPLE COUNTER	21-28
SHOW APPLE DLCI	21-34
SHOW APPLE PORT	21-35
SHOW APPLE ROUTE	21-37
SHOW APPLE ZONE	21-38

Chapter 22

Time Division Multiplexing (TDM)

Introduction	22-2
G.703 Time Division Multiplexing	22-3
Static G.703 TDM Versus ISDN Calling	22-4
BRI Time Division Multiplexing	22-5
Configuration Examples	22-5
Static G.703 TDM	22-5
Dual Mode Static G.703 and Dynamic ISDN	22-7
Command Reference	22-7
ADD TDM	22-8
CREATE TDM	22-8
DELETE TDM	22-9
DESTROY TDM	22-10
PURGE TDM	22-10
SHOW TDM	22-11

Chapter 23

Logging Facility

Introduction	23-2
Format of Log Messages	23-3
Secure Router Log Protocol	23-4
Net Manage Message Protocol	23-5
Processing of Log Messages	23-5
Output Definitions and Message Filters	23-5
Destinations	23-6
Configuring Output Definitions	23-8
Configuring Message Filters	23-9
Configuration Example	23-10
Command Reference	23-13
ADD LOG OUTPUT	23-13
ADD LOG RECEIVE	23-16
CREATE LOG OUTPUT	23-17
DELETE LOG OUTPUT	23-21
DELETE LOG RECEIVE	23-22
DESTROY LOG OUTPUT	23-22
DISABLE LOG	23-22
DISABLE LOG GENERATION	23-23
DISABLE LOG OUTPUT	23-23
DISABLE LOG RECEPTION	23-23
ENABLE LOG	23-24
ENABLE LOG GENERATION	23-24
ENABLE LOG OUTPUT	23-24

ENABLE LOG RECEPTION	23-25
FLUSH LOG OUTPUT	23-25
PURGE LOG	23-26
SET LOG OUTPUT	23-26
SET LOG RECEIVE	23-31
SET LOG UTCOFFSET	23-32
SHOW LOG	23-33
SHOW LOG COUNTERS	23-39
SHOW LOG OUTPUT	23-41
SHOW LOG QUEUE	23-45
SHOW LOG RECEIVE	23-46
SHOW LOG STATUS	23-48

Chapter 24

Scripting

Introduction	24-2
Creating Scripts	24-2
Script Commands	24-2
Using the Built-in Text Editor	24-3
Loading from a TFTP Server	24-3
Loading from an Asynchronous Port	24-3
Using Scripts	24-4
Script Parameters	24-4
Script Control Structures	24-4
Command Reference	24-5
ACTIVATE SCRIPT	24-5
ADD SCRIPT	24-6
DEACTIVATE SCRIPT	24-7
DELETE SCRIPT	24-8
IF..THEN..ELSE..ENDIF	24-8
SET SCRIPT	24-9
SHOW SCRIPT	24-11
WAIT	24-12

Chapter 25

Telephony Services

Introduction	25-3
Ports	25-4
Extensions	25-4
Groups	25-5
Prefix Management	25-6
Numbers	25-7
Tones	25-8
Calls	25-11
Internal Calls	25-11
External Calls	25-13
Call Handling	25-14
Call Hold	25-14
Call Transfer	25-15
Call Shuttle	25-16
Call Pickup	25-16
Call Redial	25-16
Call Divert	25-17

Number Processing	25-19
Shortcode Dialling	25-19
Call Barring	25-21
Call Override	25-22
Call Processing	25-23
MSN and DDI Support	25-23
CPN Forwarding on MSN-capable Lines	25-24
B Channel Allocation	25-25
Bearer Capability, LLC and HLC	25-25
Enbloc or Overlap Dialling	25-26
Autodial	25-27
Tone Suppression	25-27
Hardware Configuration	25-27
Call Logging	25-27
Least Cost Routing	25-28
Exception Routing	25-28
Multiple Carrier Routing	25-29
Time Dependent Routing	25-30
Local STD Support	25-30
Tieline Dialling	25-30
Command Reference	25-30
ADD PBX BAR	25-31
ADD PBX EXTENSION	25-31
ADD PBX GROUP	25-33
ADD PBX LCR	25-34
ADD PBX OVERRIDE	25-35
ADD PBX SHORTCODE	25-35
CREATE PBX EXTENSION	25-36
CREATE PBX GROUP	25-39
DELETE PBX BAR	25-41
DELETE PBX EXTENSION	25-41
DELETE PBX GROUP	25-42
DELETE PBX LCR	25-42
DELETE PBX OVERRIDE	25-43
DELETE PBX SHORTCODE	25-43
DESTROY PBX EXTENSION	25-44
DESTROY PBX GROUP	25-44
DISABLE PBX CPN	25-45
DISABLE PBX LCR	25-45
ENABLE PBX CPN	25-46
ENABLE PBX LCR	25-46
SET PBX	25-46
SET PBX EXTENSION	25-50
SET PBX GROUP	25-53
SET PBX LCR	25-54
SHOW PBX	25-56
SHOW PBX CALL	25-58
SHOW PBX EXTENSION	25-59
SHOW PBX GROUP	25-61
SHOW PBX LCR	25-63

Chapter 26

Dynamic Host Configuration Protocol (DHCP)

Introduction	26-2
--------------------	------

The Dynamic Host Configuration Protocol (DHCP)	26-2
Configuration Example	26-3
Command Reference	26-4
ADD DHCP POLICY	26-4
ADD DHCP RANGE	26-9
CREATE DHCP POLICY	26-9
CREATE DHCP RANGE	26-10
DELETE DHCP POLICY	26-11
DELETE DHCP RANGE	26-15
DESTROY DHCP POLICY	26-15
DESTROY DHCP RANGE	26-16
DISABLE DHCP	26-16
ENABLE DHCP	26-17
SET DHCP POLICY	26-17
SHOW DHCP	26-22
SHOW DHCP CLIENT	26-23
SHOW DHCP POLICY	26-24
SHOW DHCP RANGE	26-25

Chapter 27

Layer Two Tunnelling Protocol (L2TP)

Introduction	27-2
Overview of L2TP	27-2
Support for L2TP	27-3
Configuration Examples	27-6
Simple Dial-In System	27-6
Two-Way Communications System	27-7
Inter-Router Tunnels	27-9
Connecting to an Internet Service Provider (ISP)	27-11
Command Reference	27-12
ACTIVATE L2TP CALL	27-12
ADD L2TP CALL	27-13
ADD L2TP IP	27-14
ADD L2TP USER	27-15
DEACTIVATE L2TP CALL	27-17
DELETE L2TP CALL	27-17
DELETE L2TP IP	27-18
DELETE L2TP USER	27-18
DISABLE L2TP	27-19
DISABLE L2TP DEBUG	27-19
DISABLE L2TP SERVER	27-20
ENABLE L2TP	27-20
ENABLE L2TP DEBUG	27-21
ENABLE L2TP SERVER	27-21
SET L2TP CALL	27-22
SET L2TP CHECKSUM	27-23
SET L2TP FILTER	27-24
SET L2TP PASSWORD	27-24
SET L2TP USER	27-25
SET L2TP WINDOW	27-26
SHOW L2TP	27-27
SHOW L2TP CALL	27-30
SHOW L2TP IP	27-32
SHOW L2TP TUNNEL	27-32
SHOW L2TP USER	27-40

Chapter 28 Simple Network Management Protocol (SNMP)

Introduction	28-2
Network Management Framework	28-2
Structure of Management Information	28-3
Names	28-4
Instances	28-4
Syntax	28-5
Access	28-5
Status	28-5
Description	28-6
The SNMP Protocol	28-6
SNMP Messages	28-6
Polling versus Event Notification	28-8
Communities and Views	28-8
Support for SNMP	28-9
Configuration Example	28-11
Command Reference	28-12
ADD SNMP COMMUNITY	28-13
CREATE SNMP COMMUNITY	28-14
DELETE SNMP COMMUNITY	28-15
DESTROY SNMP COMMUNITY	28-16
DISABLE SNMP	28-16
DISABLE SNMP AUTHENTICATE_TRAP	28-16
DISABLE SNMP COMMUNITY	28-17
ENABLE SNMP	28-17
ENABLE SNMP AUTHENTICATE_TRAP	28-18
ENABLE SNMP COMMUNITY	28-18
SET SNMP COMMUNITY	28-19
SHOW SNMP	28-20
SHOW SNMP COMMUNITY	28-22

Chapter 29 Transaction Packet Assembler Disassembler (TPAD)

Introduction	29-2
The TPAD Protocol	29-3
Support for TPAD	29-5
Configuration Examples	29-7
Configuring X.25 Interfaces	29-7
Creating TPAD Instances	29-9
Troubleshooting TPAD	29-11
Command Reference	29-13
ADD TPAD	29-14
CREATE TPAD	29-14
DELETE TPAD	29-16
DESTROY TPAD	29-16
DISABLE TPAD	29-17
DISABLE TPAD DEBUG	29-17
ENABLE TPAD	29-18
ENABLE TPAD DEBUG	29-19
RESET TPAD	29-19
SET TPAD	29-20

SHOW TPAD	29-21
SHOW TPAD COUNTERS	29-22
SHOW TPAD PORTS	29-24

Chapter 30

Resource Reservation Protocol (RSVP)

Introduction	30-2
Resource Reservation Protocol (RSVP)	30-2
Support for RSVP	30-5
RSVP Proxy Agent	30-7
Command Reference	30-8
CREATE RSVP PROXY	30-9
DESTROY RSVP PROXY	30-11
DISABLE RSVP	30-12
DISABLE RSVP DEBUG	30-12
DISABLE RSVP INTERFACE	30-13
DISABLE RSVP PROXY	30-13
ENABLE RSVP	30-14
ENABLE RSVP DEBUG	30-14
ENABLE RSVP INTERFACE	30-15
ENABLE RSVP PROXY	30-15
RESET RSVP PROXY	30-16
SET RSVP INTERFACE	30-16
SET RSVP PROXY	30-17
SHOW RSVP	30-19
SHOW RSVP COUNTER	30-20
SHOW RSVP INTERFACE	30-22
SHOW RSVP PATH	30-23
SHOW RSVP PROXY	30-24
SHOW RSVP PROXY COUNTER	30-27
SHOW RSVP RESV	30-28

Chapter 31

Firewall

Introduction	31-2
Policies	31-3
Rules	31-4
Access Lists	31-7
List Files	31-7
RADIUS Servers	31-8
NAT	31-9
Monitoring Firewall Activity	31-9
Notifications	31-9
Debugging	31-9
Event Triggers	31-10
Logging	31-10
Accounting	31-12
Configuration Examples	31-12
Minimum Configuration for a Small Office	31-12
A Firewall with an ISP-assigned Internet Address	31-13
A Firewall with a Single Global Internet Address	31-13
Allowing Access to a WWW Server	31-14
Command Reference	31-15

ADD FIREWALL POLICY INTERFACE	31-15
ADD FIREWALL POLICY LIST	31-16
ADD FIREWALL POLICY NAT	31-17
ADD FIREWALL POLICY RULE	31-18
CREATE FIREWALL POLICY	31-21
DELETE FIREWALL POLICY INTERFACE	31-22
DELETE FIREWALL POLICY LIST	31-23
DELETE FIREWALL POLICY NAT	31-23
DELETE FIREWALL POLICY RULE	31-24
DELETE FIREWALL SESSION	31-24
DESTROY FIREWALL POLICY	31-25
DISABLE FIREWALL	31-25
DISABLE FIREWALL NOTIFY	31-26
DISABLE FIREWALL POLICY	31-26
ENABLE FIREWALL	31-27
ENABLE FIREWALL NOTIFY	31-28
ENABLE FIREWALL POLICY	31-29
SET FIREWALL POLICY RULE	31-30
SHOW FIREWALL	31-31
SHOW FIREWALL ACCOUNTING	31-33
SHOW FIREWALL EVENT	31-34
SHOW FIREWALL POLICY	31-36
SHOW FIREWALL SESSION	31-44

Chapter 32

Secure Shell

Introduction	32-2
Support for Secure Shell	32-2
Configuring Secure Shell	32-3
Configuration Example	32-4
Command Reference	32-6
ADD SSH USER	32-6
DELETE SSH USER	32-7
DISABLE SSH SERVER	32-7
DISABLE SSH USER	32-8
ENABLE SSH SERVER	32-8
ENABLE SSH USER	32-9
SET SSH SERVER	32-10
SET SSH USER	32-10
SHOW SSH	32-11
SHOW SSH SESSIONS	32-19
SHOW SSH USER	32-20
SSH	32-21

Appendix A

Messages

Introduction	A-3
Message Descriptions	A-3
smm001–smm255: Global Messages	A-3
s02256–s02999: Frame Relay	A-9
s03256–s03999: Point-to-Point Protocol	A-11
s04256–s04999: Appletalk	A-14
s05256–s05999: Internet Protocol (IP)	A-16

s06256-s06999: Novell IPX	A-22
s07256-s07999: SYN Driver	A-26
s08256-s08999: DECnet	A-26
s13256-s13999: X.25 Layer 3 (DCE)	A-27
s14256-s14999: Q.931	A-28
s17256-s17999: LAPB	A-29
s18256-s18999: TEST Module	A-30
s19256-s19999: LAPP	A-32
s20256-s20999: Synchronous Tunnelling (STT)	A-35
s21256-s21999: Stream Printing	A-36
s22256-s22999: TCP	A-36
s23256-s23999: Ethernet Driver	A-36
s24256-s24999: Permanent Assignments	A-37
s26256-s26999: LPD Server	A-38
s27256-s27999: Bridging	A-39
s28256-s28999: Compression	A-43
s30256-s30999: X.25 Layer 3 (DTE)	A-45
s31256-s31999: FLASH Driver	A-46
s33256-s33999: TELNET	A-47
s34256-s34999: System	A-47
s35256-s35999: Command Processor	A-48
s36256-s36999: TTY	A-48
s37256-s37999: ISDN Call Control	A-51
s38256-s38999: MIOX	A-53
s39256-s39999: BOOTP	A-55
s40256-s40999: Network Time Protocol (NTP)	A-56
s41256-s41999: BRI Driver	A-57
s42256-s42999: PRI Driver	A-58
s43256-s43999: PORT Driver	A-59
s44256-s44999: Coprocessor Engine	A-62
s45256-s45999: User Authentication Facility	A-64
s46256-s46999: Asynchronous Call Control	A-67
s48256-s48999: LOADER	A-71
s49256-s49999: INSTALL	A-73
s50256-s50999: Open Shortest Path First (OSPF)	A-76
s51256-s51999: Radius	A-79
s52256-s52999: Generic Routing Encapsulation (GRE)	A-79
s53256-s53999: Trigger Facility	A-80
s54256-s54999: Scripting	A-82
s55256-s55999: Time Division Multiplexing (TDM)	A-84
s56256-s56999: File Subsystem	A-86
s57256-s57999: Logging Facility	A-87
s58256-s58999: PING	A-90
s59256-s59999: Simple Network Management Protocol (SNMP)	A-91
s61256-s61999: Telephony Services	A-92
s62256-s62999: Security Associations	A-93
s67256-s62999: Level 2 Tunnelling Protocol (L2TP)	A-94
s70256-s70999: Dynamic Host Configuration Protocol (DHCP)	A-95
s73256-s73999: Encryption	A-95
s74256-s74999: Star Key Management	A-97
s75256-s75999: Secure Shell	A-98
s76256-s76999: Resource Reservation Protocol (RSVP)	A-99
s77256-s77999: Firewall	A-99
s79256-s79999: Transaction Packet Assembler Disassembler (TPAD) ..	A-100

Appendix B Reference Tables

Module Identifiers and Names	B-2
FLASH File System Message Codes	B-5
ISDN Q.931 Call Clearance Cause Codes	B-7
Log Message Types and Subtypes	B-9

Appendix C

SNMP MIBs

Introduction	C-3
Object Descriptor (Name)	C-3
Allied Telesyn Enterprise MIB	C-4
The Products Sub-tree	C-4
The mibObject Sub-tree	C-4
The Objects Group	C-5
The Loader Group	C-7
loadTable	C-7
loadEntry	C-7
loadIndex	C-7
loadServer	C-7
loadDestination	C-8
loadFilename	C-8
loadDelay	C-8
loadStatus	C-8
The Install Group	C-9
installTable	C-9
installEntry	C-9
instIndex	C-9
instRelDevice	C-10
instRelName	C-10
instRelMajor	C-10
instRelMinor	C-10
instPatDevice	C-10
instPatName	C-11
instRelInterim	C-11
installHistoryTable	C-11
installHistoryEntry	C-11
instHistIndex	C-12
instHistLine	C-12
configFile	C-12
licenceTable	C-12
licenceEntry	C-12
licenceIndex	C-13
licenceStatus	C-13
licenceRelease	C-13
licenceMajor	C-13
licenceMinor	C-13
licencePassword	C-14
licenceExpiry	C-14
licenceInterim	C-14
The interim release number for the release to which this licence applies.	C-14
The File Group	C-14
fileTable	C-14
fileEntry	C-14
fileIndex	C-15
fileName	C-15

fileDevice	C-15
fileCreationTime	C-15
fileStatus	C-15
fileSize	C-16
MIB-II MIB	C-17
The System Group	C-18
sysDescr	C-18
sysObjectID	C-18
sysUpTime	C-18
sysContact	C-18
sysName	C-18
sysLocation	C-19
sysServices	C-19
The Interfaces Group	C-19
ifNumber	C-19
ifTable	C-20
ifEntry	C-20
ifIndex	C-20
ifDescr	C-21
ifType	C-21
ifMtu	C-22
ifSpeed	C-22
ifPhysAddress	C-22
ifAdminStatus	C-22
ifOperStatus	C-23
ifLastChange	C-23
ifInOctets	C-23
ifInUcastPkts	C-23
ifInNUcastPkts	C-23
ifInDiscards	C-24
ifInErrors	C-24
ifInUnknownProtos	C-24
ifOutOctets	C-24
ifOutUcastPkts	C-24
ifOutNUcastPkts	C-24
ifOutDiscards	C-25
ifOutErrors	C-25
ifOutQLen	C-25
ifSpecific	C-25
The Address Translation Group	C-25
atTable	C-26
atEntry	C-26
atIfIndex	C-26
atPhysAddress	C-26
atNetAddress	C-27
The IP Group	C-27
ipForwarding	C-27
ipDefaultTTL	C-27
ipInReceives	C-27
ipInHdrErrors	C-28
ipInAddrErrors	C-28
ipForwDatagrams	C-28
ipInUnknownProtos	C-28
ipInDiscards	C-28
ipInDelivers	C-29
ipOutRequests	C-29
ipOutDiscards	C-29
ipOutNoRoutes	C-29
ipReasmTimeout	C-29

ipReasmReqds	C-29
ipReasmOKs	C-30
ipReasmFails	C-30
ipFragOKs	C-30
ipFragFails	C-30
ipFragCreates	C-30
ipAddrTable	C-31
ipAddrEntry	C-31
ipAdEntAddr	C-31
ipAdEntIfIndex	C-31
ipAdEntNetMask	C-31
ipAdEntBcastAddr	C-32
ipAdEntReasmMaxSize	C-32
ipRouteTable	C-32
ipRouteEntry	C-32
ipRouteDest	C-33
ipRouteIfIndex	C-33
ipRouteMetric1	C-33
ipRouteMetric2	C-33
ipRouteMetric3	C-33
ipRouteMetric4	C-34
ipRouteNextHop	C-34
ipRouteType	C-34
ipRouteProto	C-35
ipRouteAge	C-35
ipRouteMask	C-35
ipRouteMetric5	C-36
ipRouteInfo	C-36
ipNetToMediaTable	C-36
ipNetToMediaEntry	C-36
ipNetToMediaIfIndex	C-37
ipNetToMediaPhysAddress	C-37
ipNetToMediaNetAddress	C-37
ipNetToMediaType	C-37
ipRoutingDiscards	C-38
The ICMP Group	C-38
icmplnMsgs	C-38
icmplnErrors	C-38
icmplnDestUnreachs	C-38
icmplnTimeExcds	C-38
icmplnParmProbs	C-39
icmplnSrcQuenches	C-39
icmplnRedirects	C-39
icmplnEchos	C-39
icmplnEchoReps	C-39
icmplnTimestamps	C-39
icmplnTimestampReps	C-39
icmplnAddrMasks	C-40
icmplnAddrMaskReps	C-40
icmpOutMsgs	C-40
icmpOutErrors	C-40
icmpOutDestUnreachs	C-40
icmpOutTimeExcds	C-40
icmpOutParmProbs	C-40
icmpOutSrcQuenches	C-41
icmpOutRedirects	C-41
icmpOutEchos	C-41
icmpOutEchoReps	C-41
icmpOutTimestamps	C-41

icmpOutTimestampReps	C-41
icmpOutAddrMasks	C-41
icmpOutAddrMaskReps	C-42
The TCP Group	C-42
tcpRtoAlgorithm	C-42
tcpRtoMin	C-42
tcpRtoMax	C-42
tcpMaxConn	C-43
tcpActiveOpens	C-43
tcpPassiveOpens	C-43
tcpAttemptFails	C-43
tcpEstabResets	C-43
tcpCurrEstab	C-43
tcpInSegs	C-44
tcpOutSegs	C-44
tcpRetransSegs	C-44
tcpConnTable	C-44
tcpConnEntry	C-44
tcpConnState	C-45
tcpConnLocalAddress	C-45
tcpConnLocalPort	C-45
tcpConnRemAddress	C-46
tcpConnRemPort	C-46
tcpInErrs	C-46
tcpOutRsts	C-46
The UDP Group	C-46
udpInDatagrams	C-46
udpNoPorts	C-46
udpInErrors	C-47
udpOutDatagrams	C-47
udpTable	C-47
udpEntry	C-47
udpLocalAddress	C-47
udpLocalPort	C-48
The EGP Group	C-48
egpInMsgs	C-48
egpInErrors	C-48
egpOutMsgs	C-48
egpOutErrors	C-48
egpNeighTable	C-48
egpNeighEntry	C-49
egpNeighState	C-49
egpNeighAddr	C-49
egpNeighAs	C-50
egpNeighInMsgs	C-50
egpNeighInErrs	C-50
egpNeighOutMsgs	C-50
egpNeighOutErrs	C-50
egpNeighInErrMsgs	C-50
egpNeighOutErrMsgs	C-51
egpNeighStateUps	C-51
egpNeighStateDowns	C-51
egpNeighIntervalHello	C-51
egpNeighIntervalPoll	C-51
egpNeighMode	C-51
egpNeighEventTrigger	C-52
egpAs	C-52
The CMOT Group	C-52
The Transmission Group	C-52

The SNMP Group	C-52
snmpInPkts	C-53
snmpOutPkts	C-53
snmpInBadVersions	C-53
snmpInBadCommunityNames	C-53
snmpInBadCommunityUses	C-53
snmpInASNParseErrs	C-53
snmpInTooBigs	C-54
snmpInNoSuchNames	C-54
snmpInBadValues	C-54
snmpInReadOnlys	C-54
snmpInGenErrs	C-54
snmpInTotalReqVars	C-54
snmpInTotalSetVars	C-55
snmpInGetRequests	C-55
snmpInGetNexsts	C-55
snmpInSetRequests	C-55
snmpInGetResponses	C-55
snmpInTraps	C-55
snmpOutTooBigs	C-56
snmpOutNoSuchNames	C-56
snmpOutBadValues	C-56
snmpOutGenErrs	C-56
snmpOutGetRequests	C-56
snmpOutGetNexsts	C-56
snmpOutSetRequests	C-57
snmpOutGetResponses	C-57
snmpOutTraps	C-57
snmpEnableAuthenTraps	C-57
Frame Relay DTE MIB	C-58
Data Link Connection Management Interface	C-59
frDlcmiTable	C-59
frDlcmiEntry	C-59
frDlcmlfIndex	C-59
frDlcmiState	C-60
frDlcmiAddress	C-60
frDlcmiAddressLen	C-60
frDlcmiPollingInterval	C-61
frDlcmiFullEnquiryInterval	C-61
frDlcmiErrorThreshold	C-61
frDlcmiMonitoredEvents	C-61
frDlcmiMaxSupportedVCs	C-61
frDlcmiMulticast	C-62
The Circuit Table	C-62
frCircuitTable	C-62
frCircuitEntry	C-62
frCircuitLfIndex	C-63
frCircuitDlci	C-63
frCircuitState	C-63
frCircuitReceivedFECNs	C-64
frCircuitReceivedBECNs	C-64
frCircuitSentFrames	C-64
frCircuitSentOctets	C-64
frCircuitReceivedFrames	C-64
frCircuitReceivedOctets	C-64
frCircuitCreationTime	C-64
frCircuitLastTimeChange	C-65
frCircuitCommittedBurst	C-65
frCircuitExcessBurst	C-65

frCircuitThroughput	C-65
The Error Table	C-66
frErrTable	C-66
frErrEntry	C-66
frErrIfIndex	C-66
frErrType	C-66
frErrData	C-67
frErrTime	C-67
Frame Relay Globals	C-67
frTrapState	C-67
Data Link Connection Management Interface-Related Traps	C-67
frDLCIStatusChange	C-67
Ethernet-like Interface Types MIB	C-69
The Ethernet-like Statistics Group	C-70
dot3StatsTable	C-70
dot3StatsEntry	C-70
dot3StatsIndex	C-70
dot3StatsAlignmentErrors	C-71
dot3StatsFCSErrors	C-71
dot3StatsSingleCollisionFrames	C-71
dot3StatsMultipleCollisionFrames	C-71
dot3StatsSQETTestErrors	C-72
dot3StatsDeferredTransmissions	C-72
dot3StatsLateCollisions	C-72
dot3StatsExcessiveCollisions	C-72
dot3StatsInternalMacTransmitErrors	C-73
dot3StatsCarrierSenseErrors	C-73
dot3StatsFrameTooLongs	C-73
dot3StatsInternalMacReceiveErrors	C-73
The Ethernet-like Collision Statistics Group	C-74
dot3CollTable	C-74
dot3CollEntry	C-74
dot3CollIndex	C-74
dot3CollCount	C-74
dot3CollFrequencies	C-75
802.3 Tests	C-75
Bridge MIB	C-77
The dot1dBase Group	C-79
dot1dBaseBridgeAddress	C-79
dot1dBaseNumPorts	C-80
dot1dBaseType	C-80
dot1dBasePortTable	C-80
dot1dBasePortEntry	C-80
dot1dBasePort	C-81
dot1dBasePortIfIndex	C-81
dot1dBasePortCircuit	C-81
dot1dBasePortDelayExceededDiscards	C-81
dot1dBasePortMtuExceededDiscards	C-81
The dot1dStp Group	C-82
dot1dStpProtocolSpecification	C-82
dot1dStpPriority	C-82
dot1dStpTimeSinceTopologyChange	C-82
dot1dStpTopChanges	C-82
dot1dStpDesignatedRoot	C-83
dot1dStpRootCost	C-83
dot1dStpRootPort	C-83
dot1dStpMaxAge	C-83
dot1dStpHelloTime	C-83
dot1dStpHoldTime	C-83

dot1dStpForwardDelay	C-84
dot1dStpBridgeMaxAge	C-84
dot1dStpBridgeHelloTime	C-84
dot1dStpBridgeForwardDelay	C-84
dot1dStpPortTable	C-85
dot1dStpPortEntry	C-85
dot1dStpPort	C-85
dot1dStpPortPriority	C-85
dot1dStpPortState	C-86
dot1dStpPortEnable	C-86
dot1dStpPortPathCost	C-86
dot1dStpPortDesignatedRoot	C-87
dot1dStpPortDesignatedCost	C-87
dot1dStpPortDesignatedBridge	C-87
dot1dStpPortDesignatedPort	C-87
dot1dStpPortForwardTransitions	C-87
The dot1dTp Group	C-87
dot1dTpLearnedEntryDiscards	C-88
dot1dTpAgingTime	C-88
dot1dTpFdbTable	C-88
dot1dTpFdbEntry	C-88
dot1dTpFdbAddress	C-89
dot1dTpFdbPort	C-89
dot1dTpFdbStatus	C-89
dot1dTpPortTable	C-89
dot1dTpPortEntry	C-90
dot1dTpPort	C-90
dot1dTpPortMaxInfo	C-90
dot1dTpPortInFrames	C-90
dot1dTpPortOutFrames	C-90
dot1dTpPortInDiscards	C-91
The Static Destination-Address Filtering Database	C-91
dot1dStaticTable	C-91
dot1dStaticEntry	C-91
dot1dStaticAddress	C-92
dot1dStaticReceivePort	C-92
dot1dStaticAllowedToGoTo	C-92
dot1dStaticStatus	C-92
Traps for use by Bridges	C-93
newRoot	C-93
topologyChange	C-93
Host Resources MIB	C-94
The Host Resources System Group	C-96
hrSystemUptime	C-96
hrSystemDate	C-96
hrSystemInitialLoadDevice	C-96
hrSystemInitialLoadParameters	C-96
hrSystemNumUsers	C-97
hrSystemProcesses	C-97
hrSystemMaxProcesses	C-97
The Host Resources Storage Group	C-97
hrMemorySize	C-98
hrStorageTable	C-98
hrStorageEntry	C-98
hrStorageIndex	C-99
hrStorageType	C-99
hrStorageDescr	C-99
hrStorageAllocationUnits	C-99
hrStorageSize	C-99

hrStorageUsed	C-99
hrStorageAllocationFailures	C-99
The Host Resources Device Group	C-100
hrDeviceTable	C-100
hrDeviceEntry	C-100
hrDeviceIndex	C-101
hrDeviceType	C-101
hrDeviceDescr	C-102
hrDeviceID	C-102
hrDeviceStatus	C-102
hrDeviceErrors	C-102
hrProcessorTable	C-103
hrProcessorEntry	C-103
hrProcessorFrwID	C-103
hrProcessorLoad	C-103
The Host Resources Running Software Group	C-104
The Host Resources Running Software Performance Group	C-104
The Host Resources Installed Software Group	C-104

Glossary

Index
